


## **PRODUCT OPERATION**

The auto-steamer allows to mount the milk foam with micro-bubble and a temperature control using a temperature probe assembled into the steam wand.


The micro-bubble system works thanks to an air compressor which makes little air bubbles while using the auto-steamer.

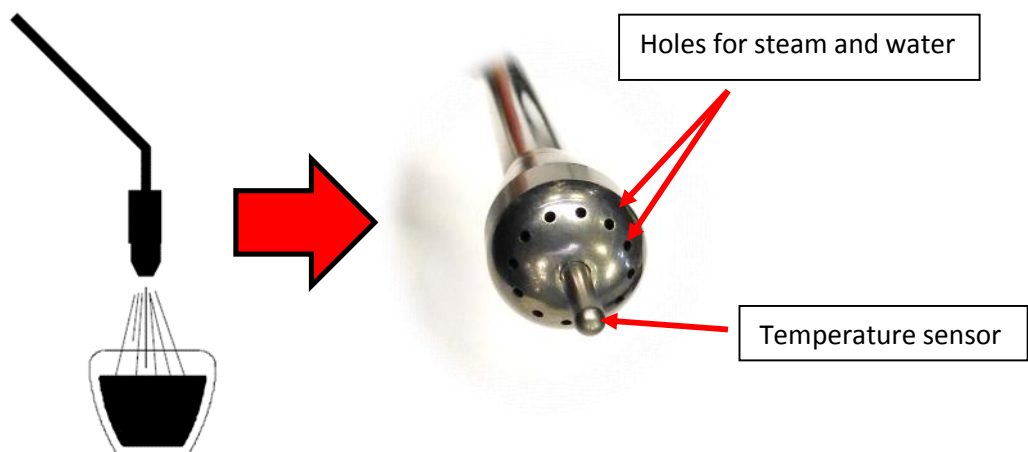

## **HOW TO USE THE AUTO-STEAMER**

You can use the auto-steamer pushing the hot water button on the 2<sup>nd</sup> keypad (on Zoe and Roma models) and on the 1<sup>st</sup> keypad (on Verona models).

The auto-steamer will stop automatically when the milk will reach the temperature set value.

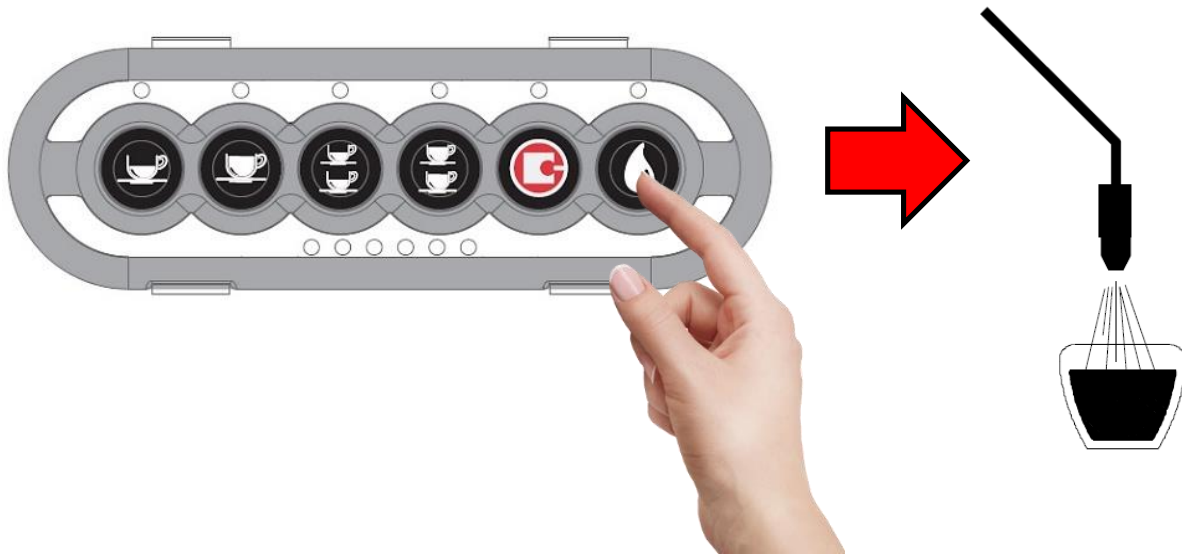

## CLEANING CYCLE

The auto-steamer hydraulic circuit has got a solenoid valve which is used to clean the steam wand from any trace of milk.

Doing a cleaning cycle every day permit you to keep in a well-maintained status the wand and the whole circuit.

You can start the cleaning cycle by pushing on the keypad next to the auto-steamer the continuous button before and maintaining pushed down it, pressing in the same time the 6<sup>th</sup> button (auto-steamer).

In this way, the machine will begin the cleaning of the steam wand alternating for 5 times water jets and steam jets.

